
DGA MACH X™ PRO PERMANENT DISC GOLF BASKET SPECIFICATION SHEET

The Mach X Disc Golf Basket is the ultimate professional level target and sets the standard for top tier disc golf tournaments.

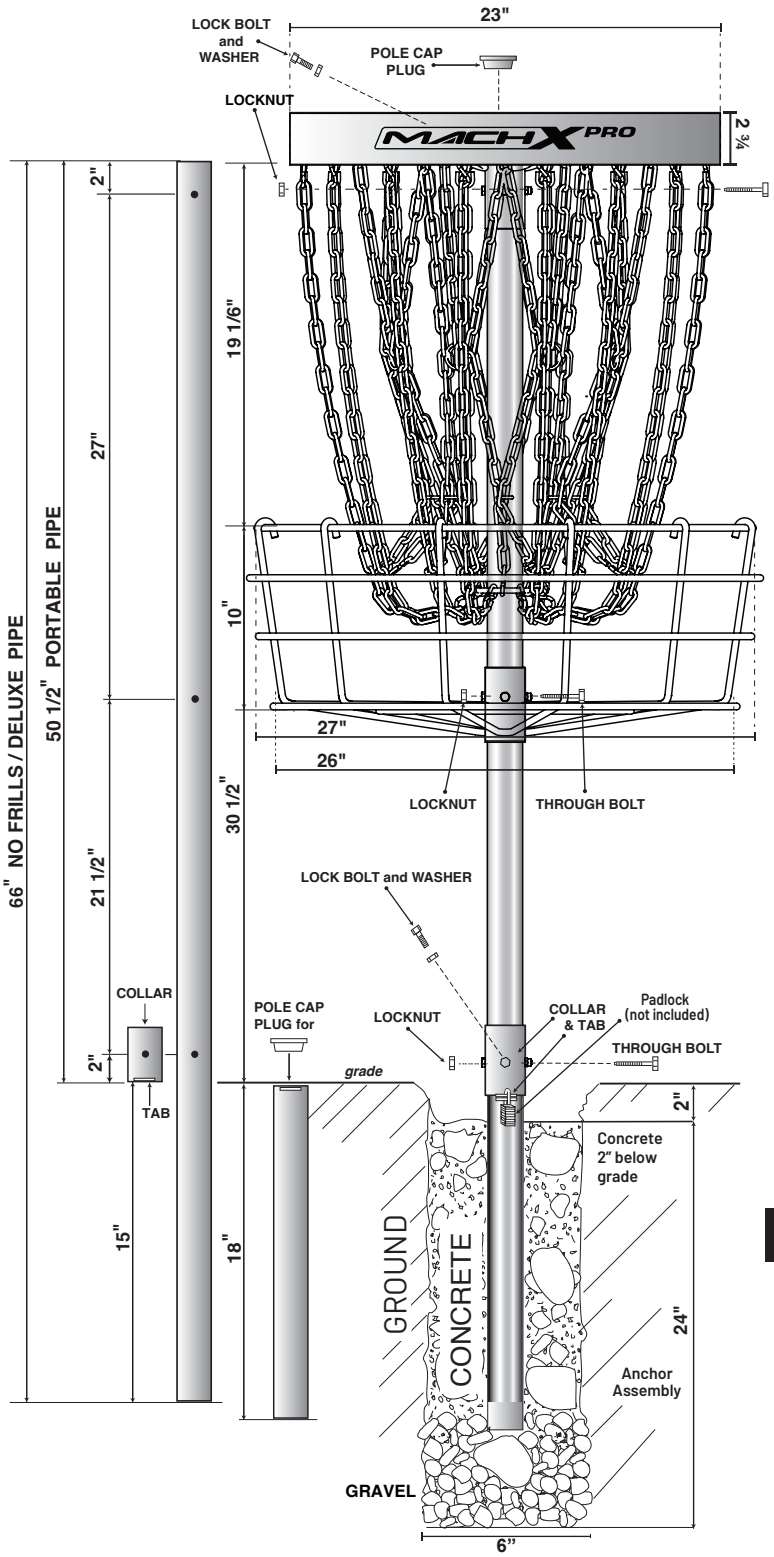

POLE (66 in.) - 1 1/2 in. I.D., 1 15/16 in. O.D. hot-dipped galvanized pipe, drilled.

POLES - The holes closest to one end of the pole are for the Chain Assembly. This end should also have a Pole Cap Plug. The middle set of holes are for the Basket Assembly. The bottom set of holes are for the Locking Collar (Standard Hole model only).

CHAIN ASSEMBLY - Welded and hot-dipped galvanized. 16 outer sliding links and strands chains, 8 midway reflex chains, 16 X-pattern inner chains. All 40 chains assembled with heavy duty stainless steel "S" hooks to allow freer movement of chains. 6" Sleeve - through bolt, washer, lock bolt, and locknut.

CHAIN ASSEMBLY INSTRUCTIONS - Slide Chain Assembly, (ring first), down pole. Align holes in collar with holes at top of pole. Fasten with through bolt, washer, lock bolt, and locknut.

TRAPPER BASKET 2 ASSEMBLY - 3/8 inch steel rod, welded and hot-dipped galvanized. 6" Sleeve - through bolt, washer, lock bolt, and locknut.

TRAPPER BASKET 2 ASSEMBLY INSTRUCTIONS - Slide Basket Assembly down pole, (basket facing up), until holes in collar align with holes in middle of pole. Fasten with through bolt, washer, lock bolt, and locknut.

*ANCHOR & COLLAR - (Standard Hole mounting option only)

COLLAR - Welded and hot-dipped galvanized. 4" Collar - 2 1/8" Tubing. Through bolt, lock bolt, washer, and locknut.

COLLAR ASSEMBLY INSTRUCTIONS - Slide the collar, with the locking tab at the bottom of collar, up pole to bottom set of holes. Align holes in collar with holes in pole and fasten with through bolt, washer, lock bolt, and locknut. After the collar is fastened, the pole can be placed in anchor to complete installation.

*Note: The LOCKING TAB should always be pointing at the tee.

ANCHOR - 18 in. x 2 1/8 in. O.D. pipe, drilled. Install flush to ground with matching Locking Tab aiming at the tee.

CONCRETE - Not provided by DGA


CAUTION: Let the concrete settle and cure 24 hrs before mounting the disc golf basket.

DGA
FIRST IN DISC GOLF

DGA | The Founding Company of Disc Golf
DiscGolf.com 831-722-6037

FOCAL POINT STICKER AND BASKET ANCHOR INSTALLATION

FOCAL POINT STICKER INSTALLATION

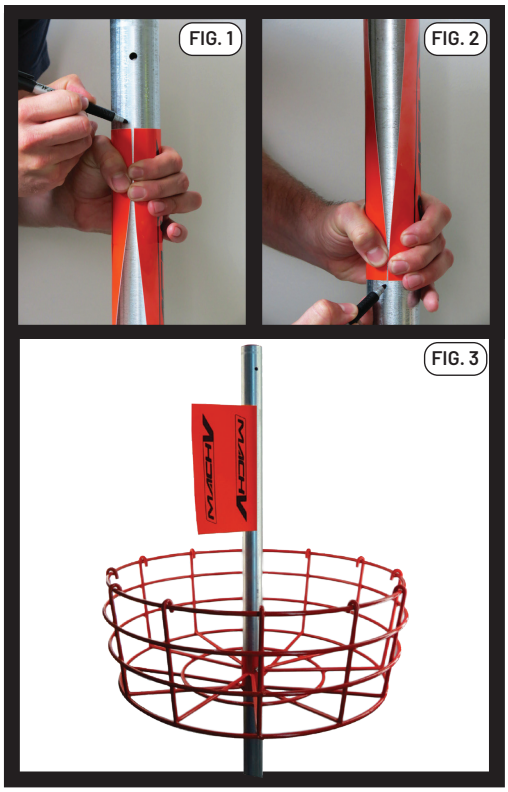

DGA Mach Baskets include heavy-duty outdoor focal point stickers for improved visibility. For best results, apply the sticker before installing the top chain holder so the chains are not in the way.


POSITION THE STICKER

- Wrap the sticker around the pole with the long side running vertically and the logos facing the front and back of the basket (see Figure 1). The two logos are printed in opposite directions; install all baskets the same way for a uniform look.
- Before removing the backing, align the top two corners of the sticker three inches below one of the two through-bolt holes in the pole.
- This position keeps the sticker seam away from the front of the basket.
- When aligned, mark the pole just above where the top corners meet, then make a second mark directly below them for the bottom edge (see Figure 2).

APPLY THE STICKER

- Remove the backing and line up the top and bottom edges of the sticker with your guide marks before wrapping it around the pole.
- Press the top and bottom corners onto the marks, then slowly smooth the sticker around the pole with your finger, rubbing up and down to avoid air pockets.
- Continue smoothing until the sticker fully wraps the pole and is completely adhered.

IN-GROUND INSTALLATION OPTION: MOUNTING THE ANCHOR

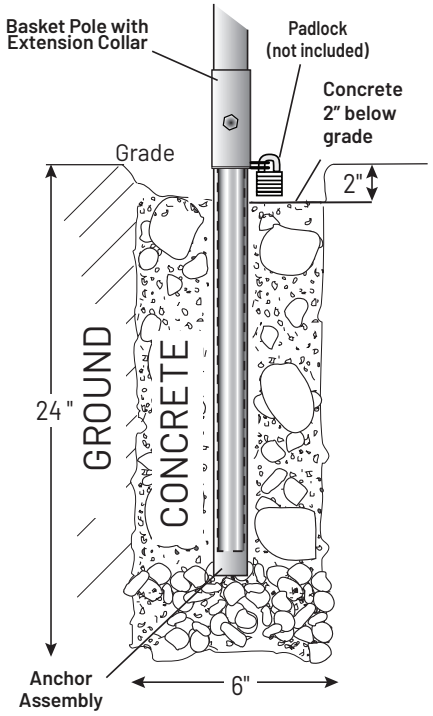

<u>Ensure no utilities are present before digging. Contact your utility provider if unsure.</u>

- Dig a 6-inch wide, 24-inch deep hole.
- Tape the bottom of the anchor to prevent concrete ingress.
- Place the anchor with the tab facing the tee, at or below grade.
- Insert the locking collar and pole into the anchor, then fill around with concrete, leaving at least 2 inches below grade for a padlock.
- Use a level to keep the post straight; brace if needed.
- Clean concrete from pole, collar, and tab.
- Remove the pole once concrete firms.
- Wait 24 hours before mounting the disc golf basket.

DGA
FIRST IN DISC GOLF

DGA | The Founding Company of Disc Golf
DiscGolf.com 831-722-6037